


TWO-TIER SHELF KIT

INSTALLATION MANUAL




STAND-ALONE SHELF

P. 2 - 3

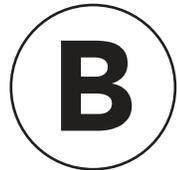


END CAP SHELF

P. 4 - 5

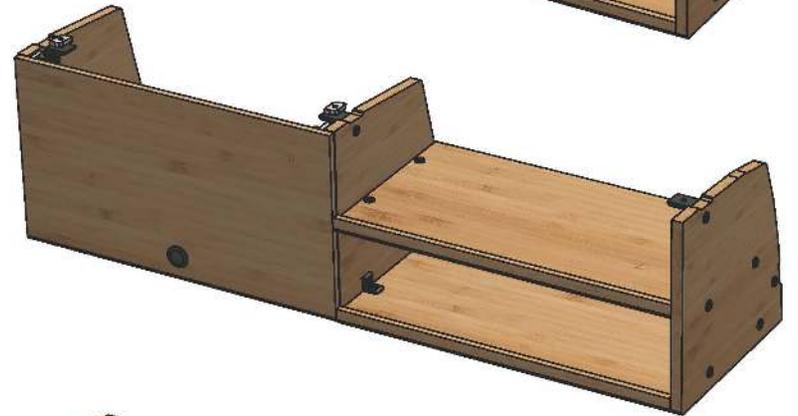

MID SHELF

P. 6 - 7

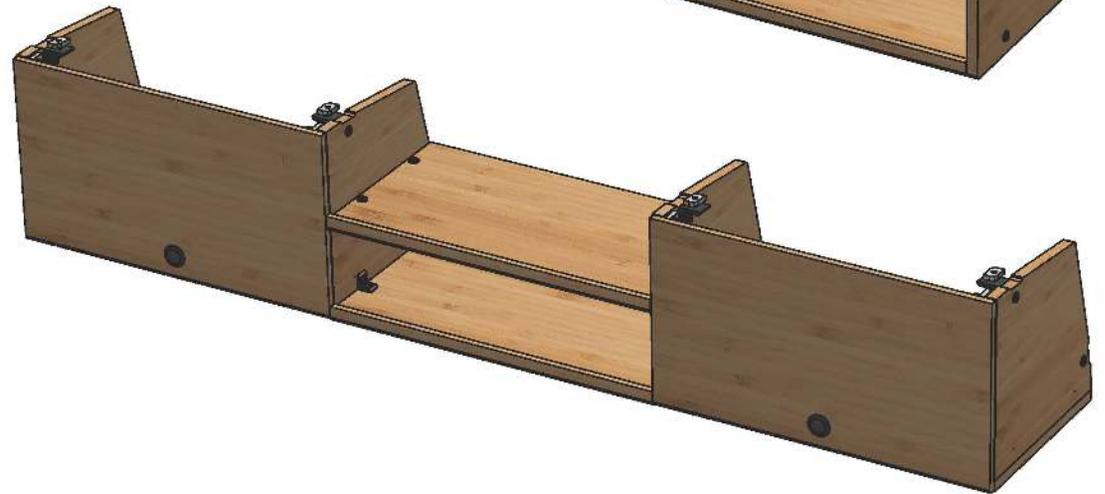

PARTS

4 Large Brackets



8 Small Brackets



12 Hat Nuts



12 Small Bolts



1 Top Shelf

12 3/8"

1 Bottom Shelf


13 15/32"

2 End Caps




STAND-ALONE SHELF


SINGLE UNIT ATTACHMENT

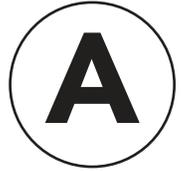

ATTENTION: Apply Loctite adhesive to all bolts before attachment.

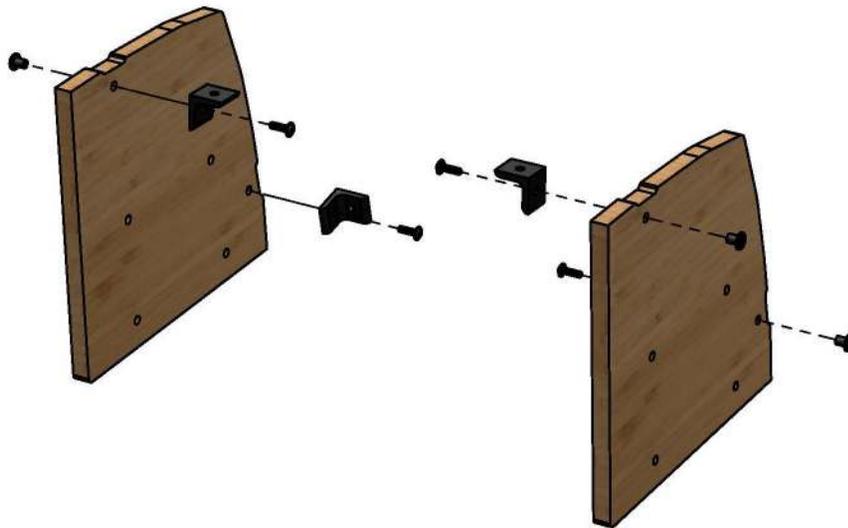

1 Attach *large brackets* to shelf end caps using *hat nuts* and *small bolts*

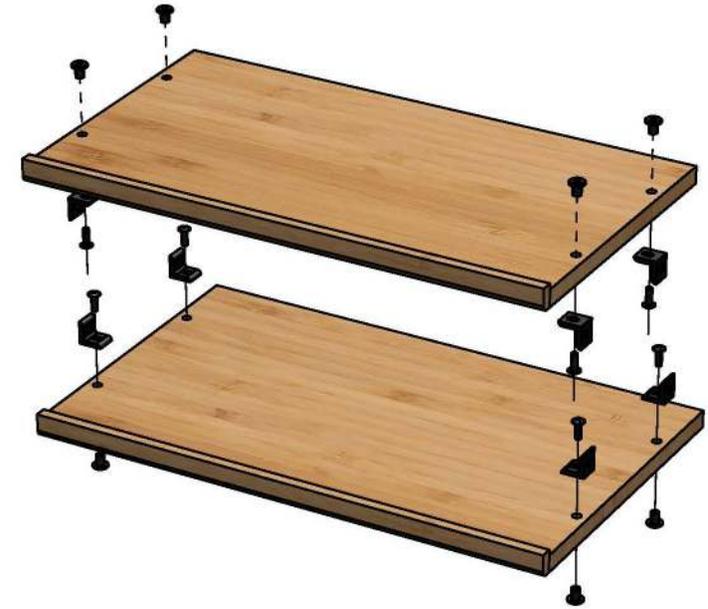


2 Attach *small brackets* to shelf units using *hat nuts* and *small bolts*




STAND-ALONE SHELF

SINGLE UNIT ATTACHMENT

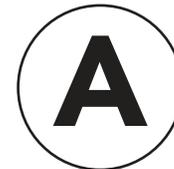

3 Attach shelves to end caps using *hat nuts* and *small bolts*

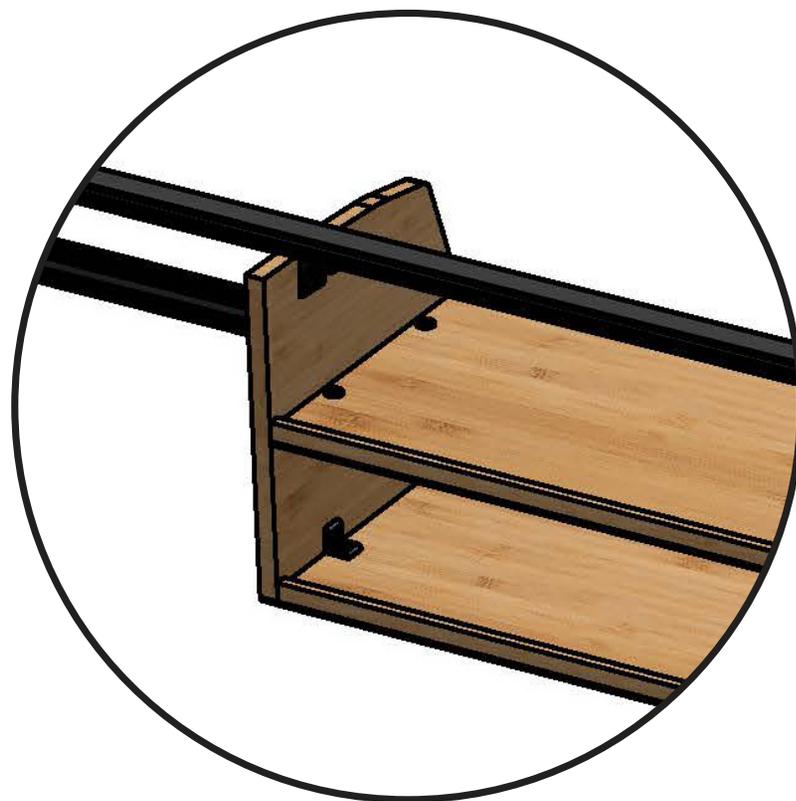

4 Attach to mounting kit see, **APPENDIX P. 8**

PARTS

2 Large Brackets



8 Small Brackets



12 Hat Nuts



12 Small Bolts



1 Top Shelf

12 3/8"

1 Bottom Shelf

13 15/32"

1 End Cap




END CAP SHELF

1 EXISTING CABINET REQUIRED


B

ATTENTION: Apply Loctite adhesive to all bolts before attachment.

Front of cabinet not shown.

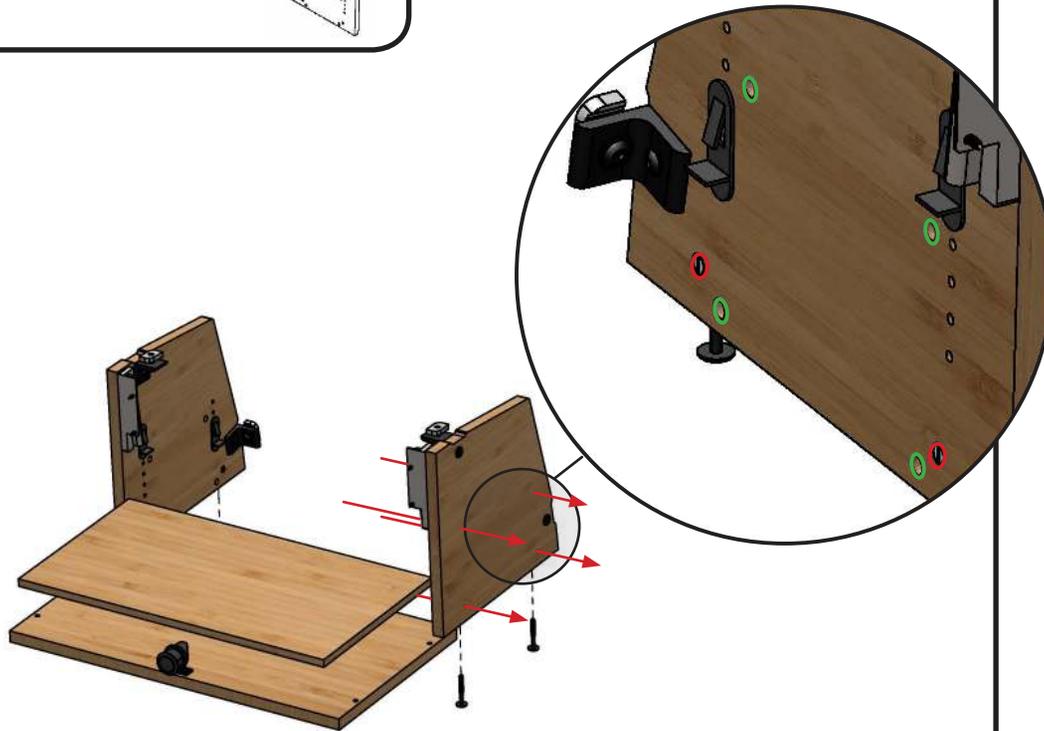

1 Remove shelf and bottom from existing cabinet and drill through the 4 existing hole markers with a 3/8" drill bit, shown in green.

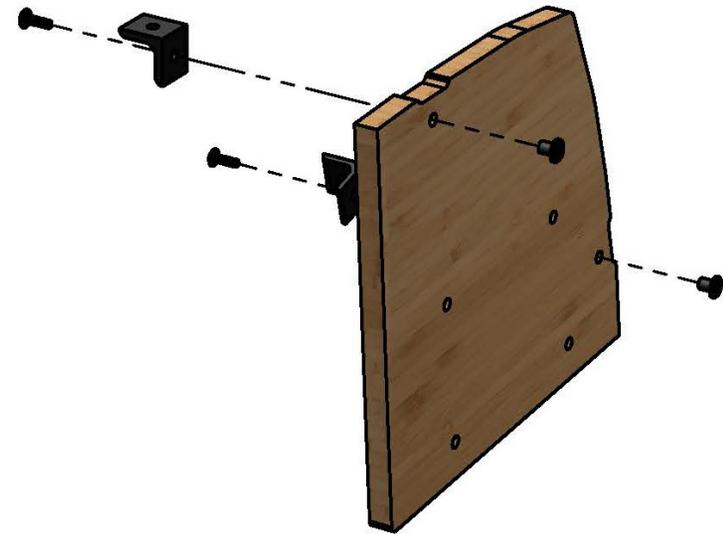

2 Attach large brackets to end cap using hat nuts and small bolts. Attach end cap to mounting kit see, **APPENDIX P. 8**




END CAP SHELF


1 EXISTING CABINET REQUIRED



ATTENTION: Front of cabinet not shown.

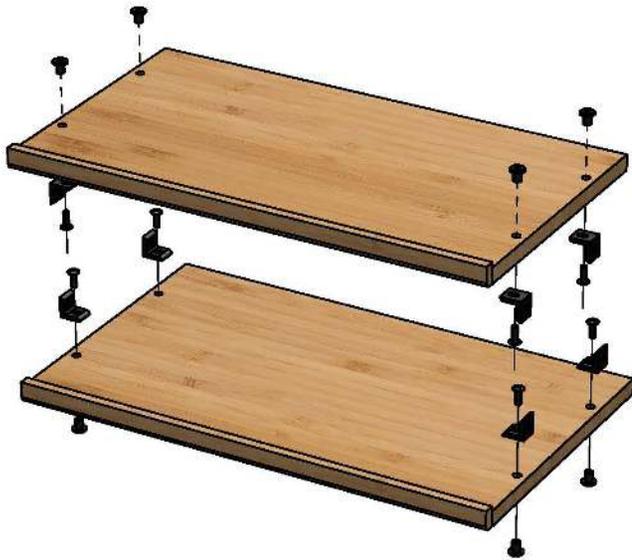

3 Attach *small brackets* to shelf units using *hat nuts* and *small bolts*

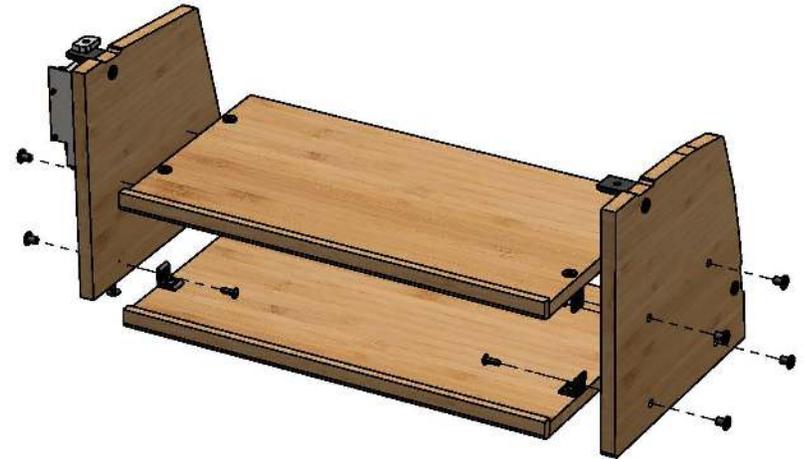

4 Attach shelves to existing cabinet and end cap using *small brackets, hat nuts, and small bolts*.
Reattach shelf and bottom to existing cabinet.

PARTS

8 *Small Brackets*



12 *Hat Nuts*



12 *Small Bolts*



1 *Top Shelf*

12 3/8"

1 *Bottom Shelf*

13 15/32"




MID-SHELF

2 EXISTING CABINETS REQUIRED




ATTENTION: Apply Loctite adhesive to all bolts before attachment.

Front of cabinet not shown.

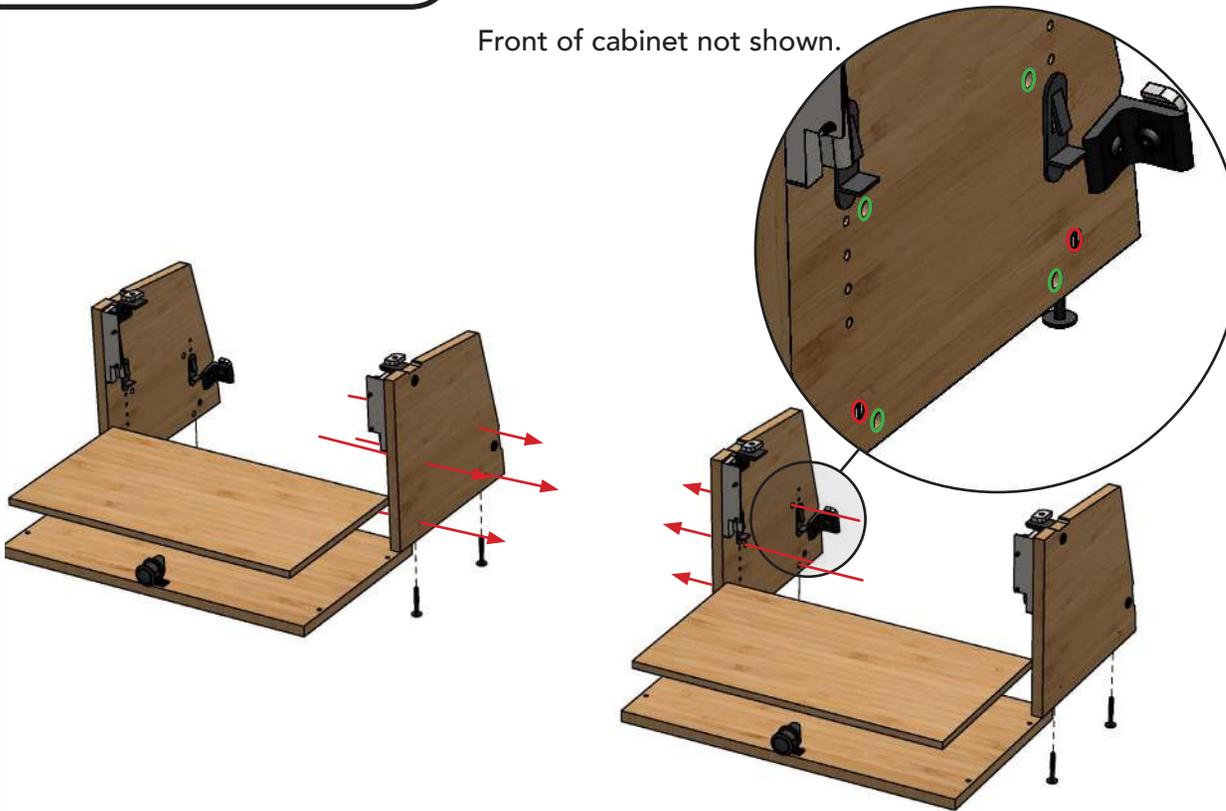

1 Remove shelf and bottom from existing cabinet and drill through the 4 existing hole markers with a 3/8" drill bit, shown in green.

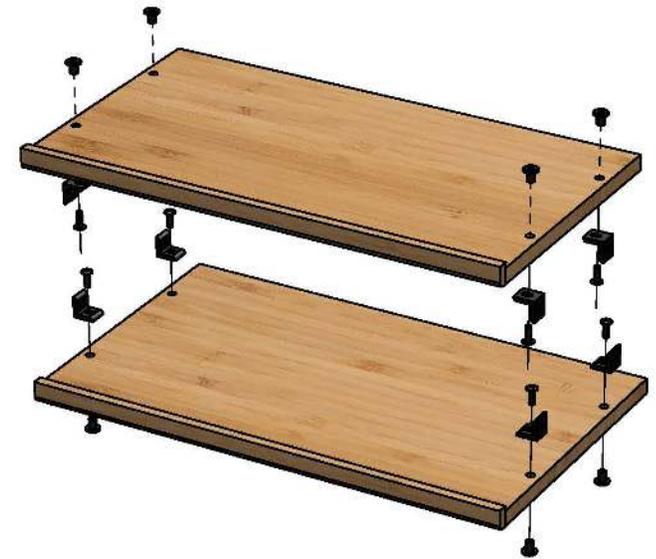

2 Attach *small brackets* to shelf units using *hat nuts* and *small bolts*




MID-SHELF

2 EXISTING CABINETS REQUIRED



ATTENTION: Front of cabinet not shown.

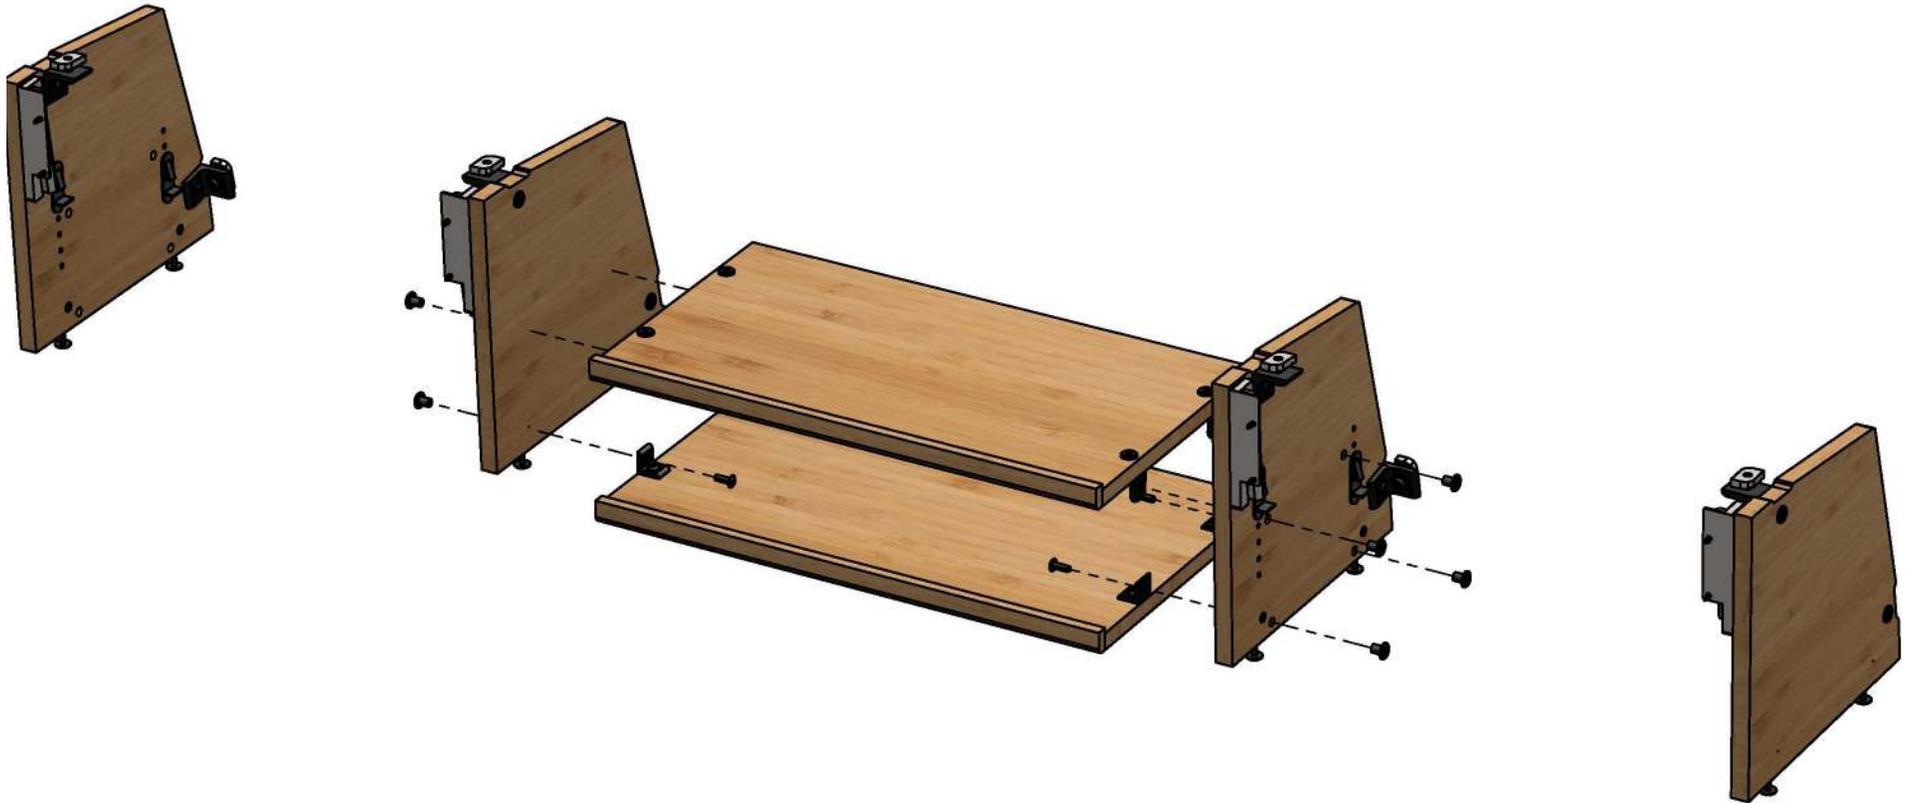

- 3 Attach shelves to existing cabinet end caps using *hat nuts* and *small bolts*. Reattach shelf and bottom to the 2 existing cabinets.

PARTS



2-4 Large Rail Bolts 

2-4 Rail Nuts 



APPENDIX ATTACHMENT TO MOUNTING KIT

ATTENTION: Apply Loctite adhesive to all bolts before attachment.

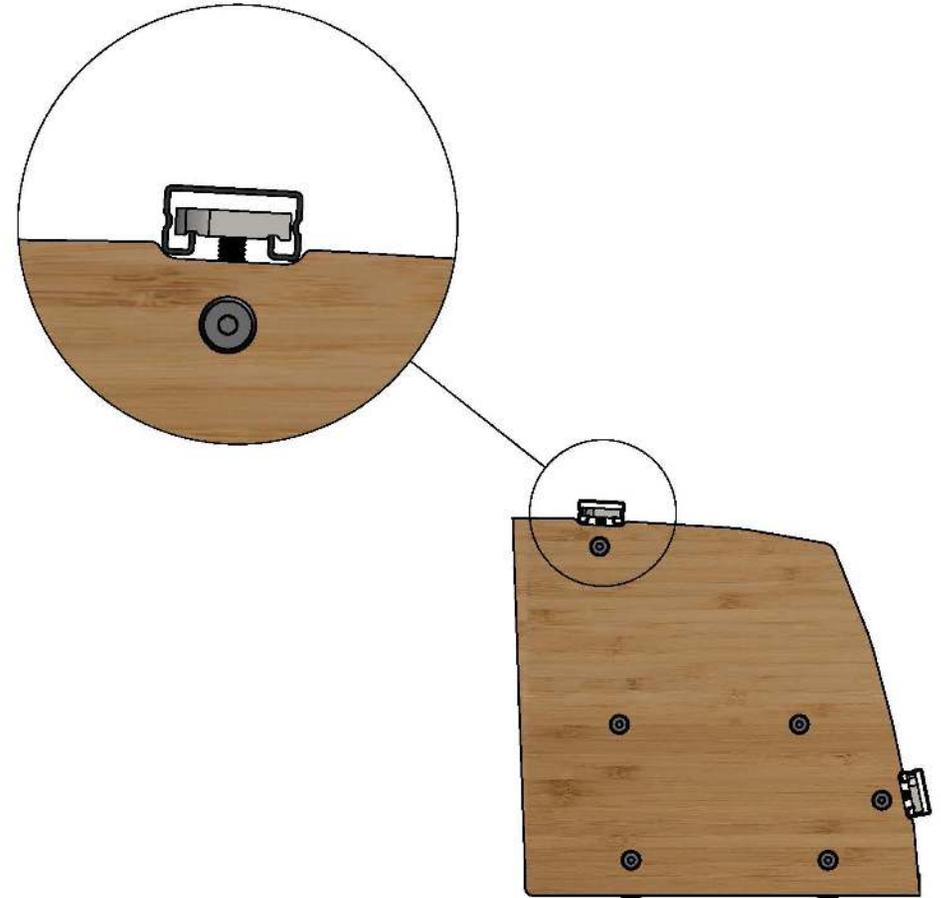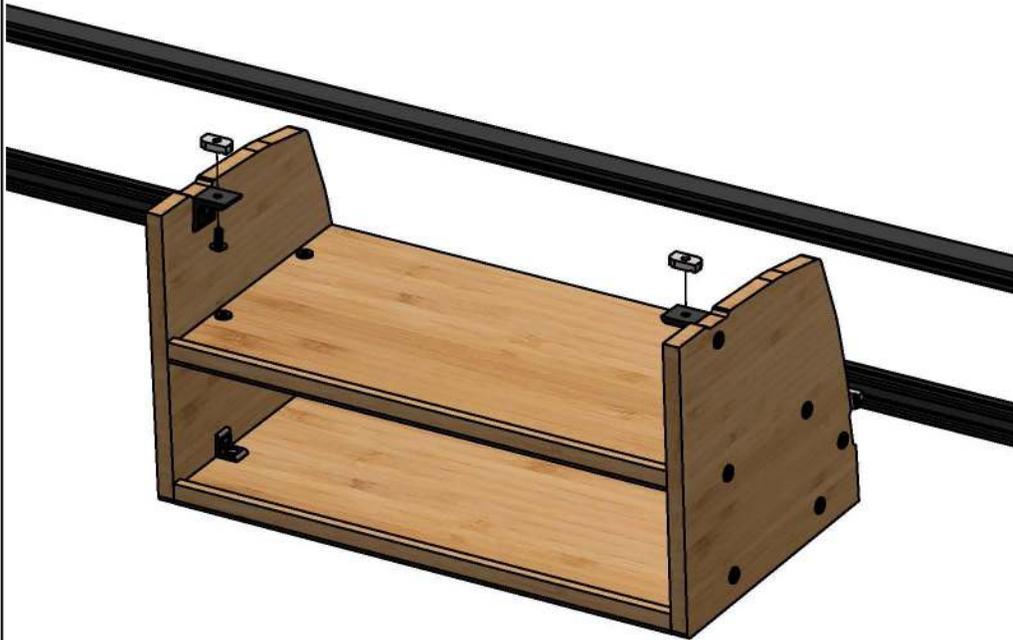

1 Screw rail nuts to large rail bolts until nut is flush with top of bolt

2 Insert assembly into top and side rails. Tighten large rail bolts until rail nuts are snug into place ensuring rail nuts engage with rail as shown.